



# INSTRUCTION MANUAL

**PT5200**

FM HANDHELD TRANSCEIVER

CE !

## Voice Annunciation

Chinese	<input type="checkbox"/>	English	<input type="checkbox"/>
Battery Save			
OFF	<input type="checkbox"/>	1:1	<input type="checkbox"/>
1:2	<input type="checkbox"/>	1:4	<input type="checkbox"/>

## 3) Auxiliary Function Button Settings

Side Button 1	Side Button 2
Null (No function)	<input type="checkbox"/> Null (No function)
Call 1	<input type="checkbox"/> Call 1
Call 2	<input type="checkbox"/> Call 2
Cancel Emergency	<input type="checkbox"/> Cancel Emergency
Lone Working	<input type="checkbox"/> Lone Working
Monitor	<input type="checkbox"/> Monitor
Instantaneously Monitor	<input type="checkbox"/> Instantaneously Monitor
Temporarily Cancel Noise Channel	<input type="checkbox"/> Temporarily Cancel Noise Channel
Cancel Noise Channel	<input type="checkbox"/> Cancel Noise Channel
Adjustable Squelch	<input type="checkbox"/> Adjustable Squelch
Scan	<input type="checkbox"/> Scan
Scrambler	<input type="checkbox"/> Scrambler
Scrambler Backup	<input type="checkbox"/> Scrambler Backup
Cancel Squelch	<input type="checkbox"/> Cancel Squelch
Instantaneously Cancel Squelch	<input type="checkbox"/> Instantaneously Cancel Squelch
Talk Around	<input type="checkbox"/> Talk Around
Power Check	<input type="checkbox"/> Power Check
Whisper	<input type="checkbox"/> Whisper
VOX	<input type="checkbox"/> VOX
Battery Power Indication	<input type="checkbox"/> Battery Power Indication
Temporary Activation of Channel Annunciation	<input type="checkbox"/> Temporary Activation of Channel Annunciation
Activation of Channel Annunciation	<input type="checkbox"/> Activation of Channel Annunciation
Reverse Frequency	<input type="checkbox"/> Reverse Frequency

Side Button 1	Side Button 2
Null (No function)	<input type="checkbox"/> Null (No function)
Call 1	<input type="checkbox"/> Call 1
Call 2	<input type="checkbox"/> Call 2
Cancel Emergency	<input type="checkbox"/> Cancel Emergency
Lone Working	<input type="checkbox"/> Lone Working
Monitor	<input type="checkbox"/> Monitor
Instantaneously Monitor	<input type="checkbox"/> Instantaneously Monitor
Temporarily Cancel Noise Channel	<input type="checkbox"/> Temporarily Cancel Noise Channel
Cancel Noise Channel	<input type="checkbox"/> Cancel Noise Channel
Adjustable Squelch	<input type="checkbox"/> Adjustable Squelch
Scan	<input type="checkbox"/> Scan
Scrambler	<input type="checkbox"/> Scrambler
Scrambler Backup	<input type="checkbox"/> Scrambler Backup
Cancel Squelch	<input type="checkbox"/> Cancel Squelch
Instantaneously Cancel Squelch	<input type="checkbox"/> Instantaneously Cancel Squelch
Talk Around	<input type="checkbox"/> Talk Around
Power Check	<input type="checkbox"/> Power Check
Whisper	<input type="checkbox"/> Whisper
VOX	<input type="checkbox"/> VOX
Battery Power Indication	<input type="checkbox"/> Battery Power Indication
Temporary Activation of Channel Annunciation	<input type="checkbox"/> Temporary Activation of Channel Annunciation
Activation of Channel Annunciation	<input type="checkbox"/> Activation of Channel Annunciation
Reverse Frequency	<input type="checkbox"/> Reverse Frequency



# INSTRUCTION MANUAL

## PT5200

FM HANDHELD TRANSCEIVER

We are very grateful for your purchasing **KIRISUN** brand two-way radios produced by Kirisun Electronics (Shenzhen) Co., Ltd.

We believe **KIRISUN** two-way radio, which always incorporates the latest technology, can bring great convenience to your life and work;

we also believe that the quality and function of **KIRISUN** two-way radio can meet your demands for reliable communication.

### PRECAUTIONS

Please observe the following precautions to prevent fire, personal injury, and radio damage.

Do not operate your radio while taking on fuel, or being charged.

Do not expose the radio for a long period to direct sunlight, nor place the radio close to heating appliances.

Do not place the radio in excessively dusty areas, humid

areas, or on unstable surfaces.

Do not modify this radio for any reason.

Refer service to qualified licensed or certificated technicians only.

#### **Notice to the User:**

- Government laws prohibit radio communication without permission in government districts.
- Illegal operation is subject to punishment by fine and/or imprisonment.
- Refer service to the well-trained professional technicians only.

#### **Safety**

It is important that the user is aware of and understands hazards common to the operation of any radios.

#### **Warning!**

Turn off your radio before entering any area with a potentially explosive atmosphere (where the air contains gas, dust and smog, etc.), such as while taking on fuel, or while parking at a gasoline service station.

#### **Precautions in Use**

Please comply with the following attentions to avoid fire, bodily injury and damage to the radio.

- The radio is recommended to transmit for 1 minute and

receive for 4 minutes. Long time transmitting or continuous working in high power mode will make the rear side of the radio generate heat.

- Please don't disassemble or assemble the radio under any circumstances.
- Please don't expose the radio to direct sunlight for a long time; don't place the radio near any heating devices, either.
- Please don't put the radio in extremely dusty, moist or dabbling places; don't place it on any unstable surfaces, either.
- If the radio emits smoke or strange odors, turn it off and remove the battery from the radio and promptly contact your local authorized Kirisun dealer.

## CONTENTS


■	Unpacking and Checking the Equipment .....	1
◆	Supplied Accessories .....	1
■	Preparation.....	2
◆	Charging the Battery.....	2
◆	Installing/Removing the Battery Pack.....	3
◆	Installing the Antenna.....	4
◆	Installing the Optional Speaker/Microphone.....	4
◆	Installing/Removing the Belt Clip.....	4
■	Radio Overview.....	5
■	Basic Operations .....	6
■	Programmable Button Function.....	7
■	Wired Cloning Mode.....	14
■	Auxiliary Functions.....	15
◆	TOT (Time-out Timer).....	15
◆	Low Power Warning.....	15
◆	Channel Annunciation.....	16
◆	QT/DQT.....	16
◆	User Solution.....	16
◆	Busy Channel Lockout (BCL).....	17
◆	SP Un-mute.....	17
◆	DTMF.....	18
◆	5-Tone.....	18
◆	2-Tone.....	19
◆	Transmitting Beginning/Ending Signaling.....	19
■	Troubleshooting.....	20
■	Major Specifications.....	21
■	Settings (by the Dealer).....	22

## ■ UNPACKING AND CHECKING EQUIPMENT

Carefully unpack the radio. We recommend that you identify the items listed in the following table before discarding the packing material. If any damage has occurred during shipment, please contact the dealer immediately.

## ■ SUPPLIED ACCESSORIES

ITEM	QUANTITY
Antenna	1
Power adapter	1
Belt clip	1
Charger	1
Hand strap	1
Li-Polymer battery	1
Instruction manual	1

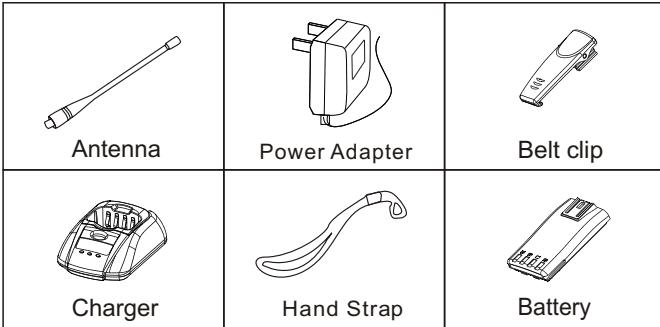


## ■ PREPARATION

### ◆ CHARGING THE BATTERY PACK



Plug the power adapter into the proper AC wall outlet; and insert the cable of the power adapter into the adapter socket on the charger; then the charger indicator lights yellow.

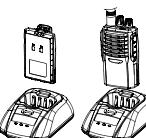

Insert the battery or the radio to be charged into the charger slot.

Make sure the battery is in good contact with the charger terminals. When the red indicator lights, the charger begins to charge the battery.

After charging for about 5 hours, the red indicator turns dim and the green indicator lights indicating the battery has been fully charged.

Leave the battery in that state of green indicator for 1~2 hours before you remove it from the charger to achieve the best performance of the battery. Then you can disconnect the power adapter from the AC outlet.

### Notice:

- \* The battery is not fully charged in the factory, and please charge the new battery when you use the radio for the first time.

- \* The radio is supplied with a KB-42A Li-Polymer battery manufactured by KIRISUN.

- \* When you charge the battery for the first time after purchasing or long storage, you should repeat charging it several times to achieve the normal battery capacity.

\* Do not recharge the battery if it has been fully charged or the battery power doesn't become low, otherwise it might affect the battery life or performance. Remove the battery from the charger after charging.


\* The built-in protection circuit in the battery will cut off power when power appears low. If you charge it in the charger then, the red indicator won't light immediately. About 1~5 minutes later, the charger indicator will become normal.

## ◆ INSTALLING /REMOVING THE BATTERY PACK




### Installing the Battery Pack

Match the 2 bulges of the battery pack with the corresponding slots at the rear bottom of the radio.

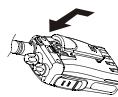

### Installing the Battery Pack

Then firmly press the battery pack downwards to lock it in place until a click is heard.

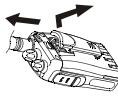

### Removing the Battery Pack

To remove the battery pack, push the latch upwards and then pull the battery away from the radio.

### Notice:

- \* Do not short-circuit the battery terminals or dispose exhausted battery in fire.
- \* Do not disassemble the battery casing.


## ◆ INSTALLING THE ANTENNA

Screw the antenna into the connector at the top of the radio by holding the bottom of the antenna and turn it clockwise until secure.



## ◆ INSTALLING THE OPTIONAL SPEAKER /MICROPHONE

Insert the Speaker/Microphone plug into the jacks of the versatile connector.

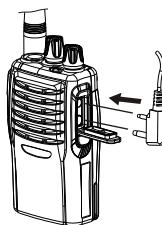

### Note:


When use the optional Speaker/Microphone, the radio will not be waterproof.

## ◆ INSTALLING /REMOVING THE BELT CLIP


Match the grooves of the belt clip with those on the rear of the battery.

Then press the belt clip downwards to lock it in place.

To remove the belt clip, use your nail or a tool to lift the metal spring piece in the belt clip from the topside, and then pull the belt clip away from the radio.

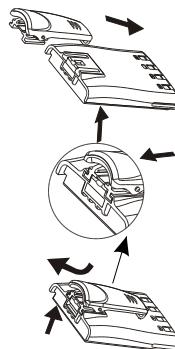

## ■ RADIO OVERVIEW

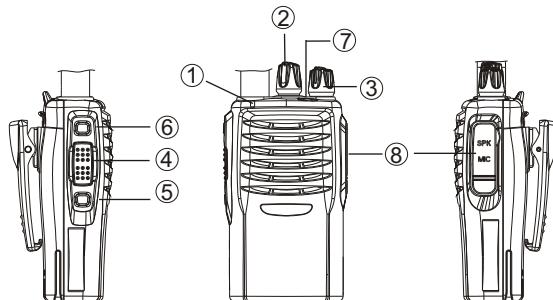

### ① LED Indicator

Lights red when transmitting; lights green when receiving.

Flashes orange when receiving the identical 5-Tone or 2-Tone signaling.

Flashes red when battery power appears low.

### ② Channel Selector

Rotate to select channel 1~16.

### ③ Power/Volume Knob

Turn clockwise to switch on the radio.

Turn counterclockwise till a click is heard to switch off the radio.

Rotate to adjust the volume after turning on the radio.

### ④ PTT (PUSH-TO-TALK) Button

To make a call, press and hold the PTT button, then speak into the microphone in normal voice. Release the PTT button to receive

signals.

### ⑤ Side Button 1 (Programmable Button)

### ⑥ Side Button 2 (Programmable Button)

### ⑦ Top Button (Programmable Button)

### ⑧ Speaker/Microphone Jacks


Used to connect the optional speaker/microphone.

## ■ BASIC OPERATION

### Switch On




Switch on the radio by turning the Power/Volume switch clockwise till a click is heard, then the radio will be in the state of stand by and you will hear a beep if the dealer has set it. And then you will hear voice annunciation of the current channel number.

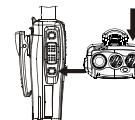


### Adjust Volume

Press the monitor button to listen to the background noise and rotate the Power/Volume switch to adjust volume.

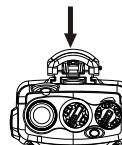

### Select Channels

Rotate the channel selector to select channels. You will hear voice from the speaker while receiving proper signals. If voice annunciation of channel number has been set, the radio will annunciate the current channel number.

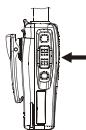

### Make a Call

To make a call, select the desired channel, press and hold the PTT button, and speak in normal voice. Please keep your mouth 3~8 cm away from the microphone.

### Receive a Call

Release the PTT button to receive a call. Select the desired channel, adjust the volume to a proper level, and then you can receive others' voice.

## ■ SCAN FUNCTION

### Programmable Button Function

The dealer can program the side button 1 and side button 2 with the following auxiliary functions:

- Null (No Function)
- CALL 1
- CALL 2
- Alarm
- Cancel Alarm
- Individual Working
- Monitor
- Instantaneously Monitor
- Temporarily Cancel Noise Channel
- Cancel Noise Channel
- Check Squelch Level

### Adjustable Squelch

- Scan
- Scrambler
- Scrambler Backup
- Cancel Squelch
- Instantaneously Cancel Squelch

### Talk Around

### Power Check

### Whisper

### VOX

### Battery Power Indication

### Temporary Activation of Channel Annunciation

### Activation of Channel Annunciation

### Reverse Frequency

The dealer can program the following functions:

#### ● Null

No Function is programmed.

#### ● CALL 1/CALL 2

Press the side button set as “Call 1” or “Call 2” to transmit the stored coding. Release Call 1 or Call 2 button and then press PTT to call others and speak to the microphone.

#### ● Emergency

When you press the top button set as “Alarm”, the radio can sound alarm tone or transmit ID code or background tone to your partners or the system, both of which can be chosen in radio programming with the software.

#### ● Cancel Emergency

Press the top button set as “Alarm” to cancel alarm function.

### ● Individual Working

Press the side button set as “Individual Working” to enter individual working mode, which ensures the user's security when the radio is in individual working.

Notice: Individual Working is relevant with the auto checking mode in the programming software and activated only when the both functions have been set.

### ● Monitor

Press the side button set as “Monitor” to turn off QT, DQT, 2-Tone and 5-Tone and to hear the signals that cannot be heard when in normal work. Press the Monitor key again to return to normal work.

### ● Instantaneously Monitor

Press the side button set as “Instantaneously Monitor” to turn off QT, DQT, 2-Tone and 5-Tone and release it to return to normal work.

### ● Temporarily Cancel Noise Channel

When the radio pauses on a certain channel during scanning, press the button set as “Instantaneously Cancel Noise Channel” to delete this channel from the scanning list temporarily.

### ● Cancel Noise Channel

When the radio pauses on a certain channel during scanning, press the button set as “Cancel Noise Channel” to delete this channel from the scanning list permanently. The radio won't scan this channel again after turning on the radio or it exits scanning.

### ● Check Squelch Level

Press and hold the button set as “Check Squelch Level” to hear the squelch level annunciation of the current channel.

### ● Adjustable Squelch

Press the button set as “Adjustable Squelch” to change squelch level. Press once to increase one level (cycle of 9-0; when at level 0 a beep sounds and squelch is activated) and store the change.

### ● Scan

A) Press the button set as “Scan” to start scanning. When in scanning, the radio checks signals on each channel; it stops scanning and pauses on the channel on which signals are detected until the signals disappear. If a delay time has been set between the interval of signal disappearing and scanning restarting, the radio will keep staying on that channel if it receives any signals during the delay time.

B) The working channel of the radio will revert to the following channels automatically when you press PTT button during scanning. The dealer can select one among the following six options.:

#### 1) Selected channel

When pressing PTT button, the radio will transmit from the first channel in the scanning list.

#### 2) Selected channel + currently working channel

When pressing PTT button during scanning, the radio will always transmit from the first channel in the scanning list. When pressing PTT button during the scanning pause, the radio will always transmit from the currently working channel

#### 3) Priority channel

The radio will transmit from the priority channel in the scanning list when you press PTT button.

#### 4) Priority channel + currently working channel

When pressing PTT button during scanning, the radio will always transmit from the priority channel. When pressing PTT button

during the scanning pause, the radio will transmit from the currently working channel

#### 5) Last called

When pressing PTT button, the radio will transmit from the last channel that received a call.

#### 6) Last used

When pressing PTT button during the scanning, the radio will transmit from the last channel you used to talk.

#### C ) Priority Scan

During scanning, if the priority channel has been set on the radio, when the priority channel receives signals the radio will automatically switch to the priority channel even the normal channel is receiving signals at that time. And the radio will stay on the priority channel till the signals disappear. The dealer can set the delay time between signal disappearing and continuing scanning.

#### D ) Temporarily Delete

When scanning pauses on a channel, press and hold the button programmed as “Temporarily Delete” or “Scan + Temporarily Delete” for 1 second to delete this channel temporarily from the scanning list.

#### Note:

The priority channel cannot be deleted. And when the number of scanning channels is less than 2, you cannot delete any channel, either.

After exiting scanning mode and entering it again, the temporarily deleted channel will be added in the scanning list again.

### ● Scrambler

Press the button set as “Scrambler” to prevent the third party from hearing clear your talking; and such a state will not be stored after turning on the radio again or switching to other channels.

### ● Scrambler Backup

Press the button set as “Scrambler Backup” to prevent the third party from hearing clear what you are talking; and such a state will be stored even after turning on the radio again or switching to other channels.

### ● Cancel Squelch

Press the button set as “Cancel Squelch” to turn on the squelch; press it again to exit.

### ● Instantaneously Cancel Squelch

Press the button set as “Instantaneously Cancel Squelch” to turn on the squelch; release it to exit.

### ● Talk Around

After you press the button set as “Talk Around”, the radio will transmit in the receiving frequency when you press the PTT button.

### ●

### Power Check

Press and hold the button set as “Check Power” to hear the current power level. One beep indicates low power; two beeps medium power; and three beeps high power.

### ●

### Whisper

After you press the button set as “Whisper”, your counterpart can hear louder voice even you speak in a very low voice; press it again to exit.

### ●

### VOX (Voice-operated transmission)

Press the button set as “VOX” to enter the voice operated mode and you can talk with your counterpart without pressing the PTT

- button.

#### Battery Power Indication

When you press the button set as “Battery Power Indication”, indication tone “1”, “2”, “3” or “4” sounds to indicate the current battery power.

- **Temporary Activation of Channel Annunciation**

When you press the button set as “Temporary Activation of Channel Annunciation”, one of the following situation occurs:

- a. If the current channel number sounds at the beginning:

Press the button set as “Temporary Activation of Channel Annunciation” to sound two beeps to temporarily cancel the channel annunciation function; you still can hear the channel number annunciation after turning on the radio again.

- b. If the current channel number doesn't sound at the beginning:

Press the button set as “Temporary Activation of Channel Annunciation” to sound one beep to temporarily activate the channel annunciation function; you won't hear the channel number annunciation after turning on the radio again.

- **Activation of Channel Annunciation**

When you press the button set as “Activation of Channel Annunciation”, if the radio sounds two beeps, it cancels the channel annunciation function; you won't hear the channel number annunciation after turning on the radio again.

When you press the button set as “Activation of Channel Annunciation”, if the radio sounds one beep, it activates the channel annunciation function; you can hear the channel number annunciation even after turning on the radio again.

- **Reverse Frequency**

Press the button set as “Reverse Frequency” to activate the

reverse frequency function.

#### ■ **Wired Cloning Mode**

If the wired cloning mode has been set, the radio won't exit automatically after it entering the wired cloning mode. To return to the user mode, you need to turn on the radio again.

##### **Wired cloning procedures are as follows:**

1) Press and hold the Side Button 2 on the host radio while turning on the radio; about 2 seconds later, two short beeps sound and red indicator flashes, and the radio enters cloning mode.

2) Press once the PTT button on the host radio, and then the sub radio to receive data will enter the Activation/Prohibition of Wired Cloning Mode. However, the wired cloning setting on the host radio won't be changed.

After pressing the PTT button, if the green indicator flashes twice and one beep sounds, it indicates the sub radio is in the state of Activation of Wired Cloning; if the red indicator flashes twice and two beeps sound, it indicates the radio is in the state of Prohibition of Wired Cloning.

3) In the cloning mode, press the Side Button 2 on the host radio, and then red indicator flashes and it begins cloning. After cloning, the indicator turns dim.

##### **Note:**

You can activate or prohibit the wired cloning mode by PC programming software. If the wired cloning mode is prohibited the radio cannot enter the wired cloning mode.

## ■ Auxiliary Functions

### ◆ TOT (Time-out Timer)

#### 1) TOT (Time-out Timer)

a) Time-out timer is to prevent any caller from occupying one certain channel and radio transmitting overlong.

b) You can program the time-out timer, i.e. the time the radio can transmit continuously. If the radio has been transmitting continuously longer than the preset time, the radio will stop transmitting and warning tone sounds, and please release the PTT button.

#### 2) TOT Re-key

a) TOT re-key specifies the time when transmission is prohibited after the time-out timer is activated.

b) During the time of transmitting prohibition, if you press the PTT button, warning tone sounds and transmitting is prohibited.

#### 3) TOT Pre-alarm

a) Before the time-out timer stops transmitting, the radio sounds pre-alarm tone.

b) After the alarm tone, if the transmitting time is longer than the preset time limit, the time-out timer will be activated.

#### 4) TOT Reset

a) TOT Reset is the delay time between releasing the PTT button and resetting the time-out timer.

b) If the time of releasing the PTT button is shorter than the TOT Reset, the countdown of transmitting prohibition will continue.

### ◆ Battery Save

The dealer can program the battery save type.

If the battery save function has been set, 10 seconds after no signals being received or no operations being conducted, the radio

enters the battery save mode. It will exit the battery save mode automatically after receiving signals or being conducted.

Battery Save Types: 1:1, 1:2, 1:4 and OFF.

Battery save function can decrease the battery power consumption.

### ◆ Low Power Warning

Low power warning tone sounds and LED flashes red when the battery power goes below the preset value and you need to recharge the battery. In low battery status transmission is prohibited.

### ◆ Channel Annunciation

The dealer can activate or prohibit this function. Two types of Chinese and English annunciation are available.

When switching to a channel by rotating the channel knob, the current channel number will sound.

### ◆ QT/DQT

The dealer can set QT/DQT on the radio channels to ignore calls on the same channel from irrelevant radios.

If a channel has been set with QT/DQT, the squelch will be activated only when it receives the proper QT/DQT signals. And only the radios set with the same QT/DQT signaling as those on yours can hear your call.

Note: Using a QT/DQT channel doesn't mean your calls are private. If the QT/DQT tones of other radios are identical with those on yours, they can hear your calls.

### ◆ User Solution

A user solution includes PTT code-transmitting, encoding,

decoding, Busy Channel Lockout, Call 1/2, SP un-mute, and decoding conditions, etc. Maximum 32 user solutions are available on this radio.

- a) An encoding template consists of at least one and at most 3 encoding sequences. The setting of each sequence has options 5-Tone, 2-Tone, and DTMF. If it is set at 5-Tone or DTMF, you need to program its content. If it is set at 2-Tone, you need to program two frequencies. After setting the encoding templates, the dealer can choose one of these encoding templates as the user solution.
- b) The decoding templates are divided into 5-Tone decoding templates and 2-Tone decoding templates. Only when the decoding template is identical with the encoding template, it can decode successfully.

#### ◆ **Busy Channel Lockout (BCL)**

Busy Channel Lockout can prevent you from interfering other radios using the same channel.

If you press the PTT button when the channel is busy, the radio with BCL function active will make warning sound and transmission is prohibited. To stop the warning sound, please release the PTT button and the radio will return to receiving mode.

The dealer can set one of the following BCL types:

- 1) OFF: BCL is inactive and you can transmit on the busy channel.
- 2) Carrier wave: If carrier wave is detected, the radio is unable to transmit.
- 3) QT/DQT: The radio is allowed to transmit when the QT/DQT signalings are identical.
- 4) Selective signaling: The radio is allowed to transmit when the selective signalings (2-Tone or 5-Tone) are identical.

#### ◆ **SP Un-mute**

The dealer can set the conditions to activate the speaker. There are 6 options:

- 1) Carrier wave: The speaker will be activated when carrier wave is detected.
- 2) Carrier wave + selective signaling: The speaker will be activated when carrier wave is detected and the selective signalings are identical.
- 3) Carrier wave or selective signaling: The speaker will be activated when carrier wave is detected or the selective signalings are identical.
- 4) QT/DQT: The speaker will be activated when QT/DQT signalings are identical.
- 5) QT/DQT + selective signaling: The speaker will be activated when QT/DQT and selective signalings are identical.
- 6) QT/DQT or selective signaling: The speaker will be activated when QT/DQT or selective signalings are identical

#### ◆ **DTMF**

The dealer can set DTMF signaling into encoding sequence. If DTMF is set in the encoding template, press the corresponding programmable button “Call 1” or “Call 2” to transmit the coding.

#### ◆ **5-Tone**

The dealer can activate or deactivate this function by programming. 5-Tone has 17 encoding formats: CCIR1, CCIR2, PCCIR, ZVEI1, ZVEI2, SVEI3, PZVEI, DZVEI, PDZVEI, EEA, EURO SINAL, NATEL, EIA, CCITT, MODAT, USER DEFINED 1, and USER DEFINED 2. The last two formats are user defined.

#### 1) 5-Tone Decoding

When receiving proper 5-tone signaling, squelch will be activated according to the “SP un-mute” mode defined by the user. You

can receive the call and LED flashes orange.

After decoding successfully, the radio will work according to the decoding call response set by the dealer.

#### 2) 5-Tone Encoding

If the PTT ID on the channel you select has been set with 5-Tone, 5-Tone signaling will be transmitted when making a call.

Or transmit 5-Tone signal by pressing the Call 1 or Call 2 button,, which can be set by the dealer.

#### ◆ 2-Tone

The dealer can activate or inactivate this function by programming.

##### 1) 2-Tone Decoding

When receiving proper 2-Tone signaling, the radio will work according to the decoding call response set by the dealer. LED flashes orange.

##### 2) 2-Tone Encoding:

If the PTT ID on the channel you select has been set with 2-Tone, 2-Tone signaling will be transmitted when making a call.

Or transmit 2-Tone signal by pressing the Call 1 or Call 2 button, which can be set by the dealer.

#### ◆ Transmitting Beginning/Ending Signaling

1) Transmitting Beginning/Ending signaling is used to join in or disconnect from some repeater and calling system.

2) Transmitting Beginning signaling is used to join in the conventional repeater and its relevant auxiliary equipments. If the ID being transmitted matches with the repeater's ID, it can use the repeater and its auxiliary equipments.

3) Transmitting Ending signaling is used to disconnect with the conventional repeater and its relevant auxiliary equipments. If the ID being transmitted matches with the repeater's ID, it can disconnect from the repeater and its auxiliary equipments.

## ■ TROUBLE SHOOTING GUIDE

NO.	PROBLEM	SOLUTION
1	The radio cannot be switched on or no display after switched on.	<ul style="list-style-type: none"> <li>● Battery pack may not be installed properly. Remove the battery pack and install it again.</li> <li>● Battery power may be insufficient. Recharge or replace the battery pack.</li> </ul>
2	The battery power consume quickly after charging.	<ul style="list-style-type: none"> <li>● The battery life is finished; please replace it with a new battery pack.</li> </ul>
3	Cannot talk to or hear other members in your group.	<ul style="list-style-type: none"> <li>● The frequency or QT/DQT signalings are not identical and please reprogram it.</li> <li>● Make sure the SP un-mute setting of the selective signaling 2-Tone or 5-Tone in user solution is proper.</li> <li>● Beyond the radio efficient communication range.</li> </ul>
4	Other voices from non-group members are heard on the channel.	<ul style="list-style-type: none"> <li>● Change the QT/DQT tone, and make sure change the tone on all radios in your group.</li> <li>● Please set 2-Tone or 5-Tone selective signaling on the channel.</li> </ul>
5	Communication range is too small.	<ul style="list-style-type: none"> <li>● Make sure the antenna is well connected.</li> <li>● Make sure the antenna is the originally supplied one.</li> <li>● Check if the battery power is in the normal state.</li> <li>● Ask your local dealer to adjust the squelch level.</li> </ul>

6	Unable to transmit.	<ul style="list-style-type: none"> <li>Make sure the PTT button has been pressed completely.</li> <li>Battery power may be insufficient. Recharge or replace the battery pack.</li> <li>Transmitting frequency has not been set on the channel and the radio has been remote killed.</li> </ul>
7	Noise is too loud.	<ul style="list-style-type: none"> <li>Battery power may be insufficient. Recharge or replace the battery pack.</li> <li>Beyond the efficient communication range.</li> </ul>

## ■ Major Specifications

PT5200		
Frequency Range (MHz)	(1) 136~174	(4) 470~512
	(2) 420~470	(5) 350~390
	(3) 400~450	
RF Power	4W (H) / 2W(M) / 0.5W (L)	
Spurious and Harmonics	≤-70 dB	
Frequency Stability	± 2.5ppm	
Maximum Frequency deviation	± 5kHz (W)/ ± 3.5kHz (M)/ ± 2.2 kHz (N)	
Receiver Sensitivity	≤0.3µV	
Adjacent Channel Selectivity	≥70dB (W/M)/ 65dB (N)	
Intermodulation Reject Ratio	≥65dB	
Maximum AF Output Power	≥500mW	
Number of Channels	16	
Battery (Standard)	DC 7.4V	
Dimension (W×H×D)	56mm×102 mm×29 mm	
Weight	235g (With battery and antenna)	

## ■ SETTINGS (set by the dealer)

Model: \_\_\_\_\_

Serial No.: \_\_\_\_\_

### 1) Channels List

Channel	Transmitting Frequency	Receiving Frequency	QT/DQT Decode	QT/DQT Encode	Power	Channel Spacing	User Solution
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15							
16							

### 2) Optional Functions

Time-out Time (TOT)

15-600s

Squelch Level

1-9